

# 6 Camera

<b>Precautions for Using Camera</b> .....	<b>P.6-2</b>
Shutter Click .....	P.6-2
File Formats/Save Location .....	P.6-2
Photo Size/Movie Size .....	P.6-3
<b>Viewfinder</b> .....	<b>P.6-3</b>
<b>Photo Shooting</b> .....	<b>P.6-4</b>
Photo Shooting Mode .....	P.6-4
Shooting Photos .....	P.6-4
Using Menu of Photo Viewfinder .....	P.6-4
<b>Movie Shooting</b> .....	<b>P.6-5</b>
Movie Shooting Mode .....	P.6-5
Shooting Movies .....	P.6-5
Using Menu of Movie Viewfinder .....	P.6-5
<b>Checking Images/Videos</b> .....	<b>P.6-6</b>
Viewing/Playing Images/Videos .....	P.6-6
Editing Images .....	P.6-6

## Precautions for Using Camera

- Mind etiquette when using Camera. Before capturing an important scene, take some test shots and view results to ensure the scene will be captured properly.
- Do not use Camera where prohibited.
- Images taken with Camera are intended for personal use, and may not be used or forwarded without the permission of the copyright holder (photo subject), etc.
- Lenses soiled with fingerprint smudges and grease may not focus well. Clean Lens off with a soft cloth.
- Hold handset firmly to avoid camera shaking, which may blur images especially in dark places.
- If handset has been left in a hot place for a prolonged period of time, image quality when shooting and saving images may be affected.
- Exposing Lens to direct sunlight may degrade Internal Color Filter, resulting in poor image quality.
- Camera cannot be activated when Battery level is low.
- When Battery level is low or no operations are performed for two minutes after Camera is activated, Camera is deactivated.

### Shutter Click

Even in Manner mode, the shutter click sounds for photos. Also during video shooting, start and stop beeps sound. Sound volume is fixed.

### File Formats/Save Location

Captured Images/Videos are saved to handset or SD Card. Saved Images/Videos can be checked in Data Folder (P.9-2). File Formats are as follows:

Item	File Formats
Image	JPEG (.jpg)
Video	MP4 (.mp4)


To save to SD Card, change the save location. (P.6-4, P.6-5)


To check memory space: (P.10-10)

## Photo Size/Movie Size

Photo size and Video size to set are as follows:

Item	Photo/Video Size
Image	1200 × 1600 (UXGA)
	1024 × 1280 (SXGA)
	960 × 1280 (WXGA)
	768 × 1024 (XGA)
	600 × 800 (SVGA)
	240 × 320 (QVGA)
Video	HD 720p
	SD 480p
	QVGA

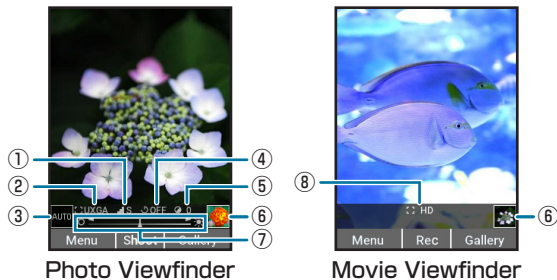

- ① Shooting picture quality
- ② Shooting size
- ③ Shooting scene
- ④ Self-timer
- ⑤ Exposure
- ⑥ The latest image  
The latest Photo/video that has been shot appears.
- ⑦ Brightness adjustment bar  
Press  to adjust brightness.
- ⑧ Recording size

# Photo Shooting

## Photo Shooting Mode



Photos are shot in portrait view.

Shooting size, self-timer, exposure, picture quality, scene, effect can be set for photo shooting. (P.6-4)

## Shooting Photos

### 1 in Standby


Photo Viewfinder appears.

- Alternatively, in Standby,  → "Camera" to activate Camera. Or in Standby, Long Press  → "Photo" to activate Camera.

### 2 Aim Camera at subject → (Shoot)/



The shutter click sounds; image is shot and saved.

- Press  (Gallery) to check an image that you shot.

## Using Menu of Photo Viewfinder

Switch to Movie and change settings.

### 1 In Standby, → (Menu)

### 2 Select each item

Item		Description
Switch to Movie		Switch shooting mode to Movie.
Setting (Photo)	Size	Set shooting size. (P.6-3)
	Self-timer	Use self-timer.
	Exposure	Adjust exposure.
	Picture Quality	Set picture quality.
	Scene	Set shooting scene.
	Effect	Set effect.
Setting (General)	Storage (Phone or SD)	Set save location.
	Camera Initialize	Initialize photo settings.

# Movie Shooting

## Movie Shooting Mode

Movies are shot in portrait view.  
Recording size can be set for movie shooting.  
(P.6-5)

## Shooting Movies

### 1 Long Press in Standby → "Movie"

Movie Viewfinder appears.


- In Photo Viewfinder,  (Menu) → "Switch to Movie" to activate.

### 2 Aim Camera at subject → (Rec)/

Shooting start beep sounds, and recording starts.

### 3 (Stop)/

Shooting stop beep sounds, and video is saved.

- Press  (Gallery) to check a video that you recorded.

## Using Menu of Movie Viewfinder

Switch to Photo and change settings.

### 1 Long Press in Standby → "Movie" → (Menu)





### 2 Select each item

Item		Description
Switch to Photo		Switch shooting mode to Photo.
Setting (Movie)	Size	Set recording size. (P.6-3)
Setting (General)	Storage (Phone or SD)	Set save location.
	Camera Movie Initialize	Initialize movie settings.


# Checking Images/Videos

## Viewing/Playing Images/Videos

View images and play videos.

- 1 In Standby,  → "Data Folder"
- 2 "Pictures"/"Videos"
  - When checking images/videos saved to SD Card, press  (SD) to switch to SD Card.
- 3 Select a folder → 
- 4 Select an image/a video → 






The image/video appears.



  - For videos, press  (Play) repeatedly to play video.
  - Operations for images: (P.9-3)
  - Operations for videos: (P.9-4)



## Editing Images

Images can be edited such as changing size or effect, rotating images.

- Images cannot be edited depending on the type and size of image.

- 1 In Standby,  → "Data Folder"
- 2 "Pictures" → Select a folder →  → Select an image to process → 
- 3  (Edit)
- 4  (Menu) → Select each item

Item	Description
Resize	Resize the image.
Rotate	Rotate the image with  (Left) and  (Right).
Effect	Change the effect.
Cancel	Cancel editing images.

- 5  → Edit image →  (Save) → "Yes"  
The edited image is saved.