




Handset Code	P.8-2
Registering Handset Code.....	P.8-2
Changing Handset Code.....	P.8-2
Resetting Handset Code.....	P.8-2
Security Functions	P.8-3
Using Screen Lock.....	P.8-3
Using Secret Mode.....	P.8-4

Handset Code




Set a four- to eight-digit code.



■ Registering Handset Code

Registering handset Code is required for the first time activation. Operations to register are as follows:



- 1 In Standby,  → "Settings" → "Security" → "Chg. Handset Code" → "OK"
- 2 Enter a password to register → 
- 3 Enter a password to register again →  → "OK"
Handset Code is set.

■ Changing Handset Code

- 1 In Standby,  → "Settings" → "Security" → "Chg. Handset Code"
- 2  → "Password change" → "OK"
- 3 Enter current password →  → "OK"

- 4 Enter new password → 
- 5 Enter new password again →  → "OK"
Handset Code is changed.

■ Resetting Handset Code


- 1 In Standby,  → "Settings" → "Security" → "Chg. Handset Code"
- 2  → "Password Reset" → "Yes" → Follow onscreen instructions
Handset Code is reset.
 - To reset Handset Code, My SoftBank authentication is required. My SoftBank authentication can be set from My SoftBank Website.


Security Functions

Various security functions protect handset and data in handset.

Using Screen Lock

When turning on the screen, only entering PIN or password enables handset operations.



- When Screen Lock is not canceled, press  (EMG.CALL) to call 110 (Police), 119 (Fire & Ambulance) or 118 (Japan Coast Guard).

1 In Standby,  → "Settings" → "Security" → "Screen Lock"

Screen Lock setting window appears.

- When "PIN" or Password" has already been set, operations for canceling Screen Lock is required.

2 "PIN" / "Password" → "OK"


3 Enter PIN/password →  → Enter Pin/password again → 
Screen Lock is set.

CAUTION



- Be sure to make a separate note of PIN/password that you registered for canceling Screen Lock so that you will not forget it. If you forget the code, servicing is required at your nearest SoftBank shop. In that case, note that the contents that you registered/set will be lost.

Canceling Screen Lock


When PIN/Password Entry window appears after the screen is turned on, canceling Screen Lock is as follows to use handset:





1 Enter PIN/password that you set in PIN/Password Entry window → 
Screen Lock is canceled.

Canceling Screen Lock Settings

1 In Standby,  → "Settings" → "Security"
2 Enter PIN/password →  → "None"
Screen Lock settings are canceled.


■ Long Pressing to Set Screen Lock

Long Press  (Center Key) in Standby to set Screen Lock.

- 1 In Standby,  → "Settings" → "Security" → "Screen Lock"
- 2 "Long Press Center Key"
Screen Lock is activated by Long Pressing .
• Long Press  or  to cancel Screen Lock.





INFORMATION

- When "Long Press Center Key" is not set, Long Press  to lock the screen.

■ Using Secret Mode

Set whether to hide contacts, etc. set to Secret Mode.

- 1 In Standby,  → "Settings" → "Security"
- 2 "Secret Mode"
- 3 Enter a password → 
- 4 "Hide"/"Show"

Contacts, etc. registered as Secret Mode are hidden/shown.